Under-hood Fuse/Relay Box

– Fuse-to-Components Index

Top View

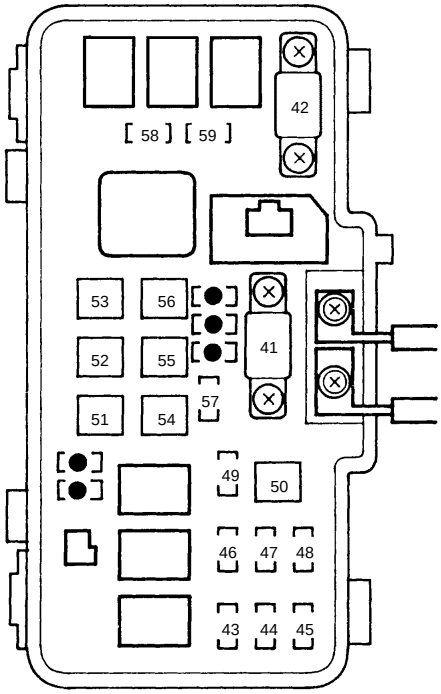

Bottom View

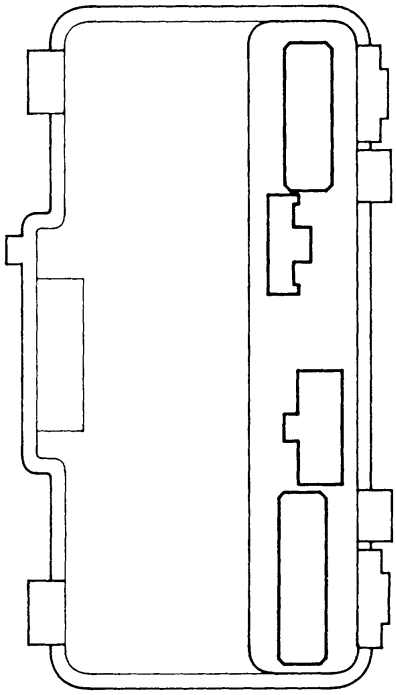

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
41	BATTERY	100	10	Power distribution
42	IG1 MAIN	50	10-3	Ignition switch (BAT)
43	RIGHT HEAD LIGHT	20	10-14	DRL control unit (Canada), Right headlight
44	—	—	10-14	Not Used
45	LEFT HEAD LIGHT	20	10-14	DRL control unit (Canada), High beam cut relay (Canada), High beam indicator (USA), Left headlight
46	ACG S	15	10	DLC, PGM-FI main relay
47	STOP	20	10-2	ABS control unit, Brake lights, Cruise control unit, Horn relay, Ignition key light, Key interlock switch (A/T), PCM or ECM
48	(ABS F/S)	(20)	10-2	ABS control unit (All except '01-'02 V6), ABS/TCS control unit ('01-'02 V6)
49	HAZARD	15	10-2	Turn signal/hazard relay
50	(ABS MOTOR)	(30)	10-2	ABS pump motor, Fuse 14 (in passenger's under-dash fuse/relay box)
51	(POWER WINDOW MOTOR)	(40)	10-1	Fuse 1 (in passenger's under-dash fuse/relay box), Power window relay

©2002 American Honda Motor Co., Inc.

Under-hood Fuse/Relay Box

– Fuse-to-Components Index

Top View

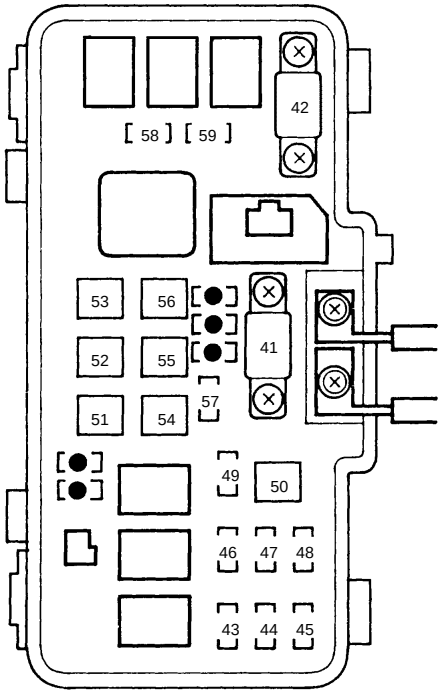

Bottom View

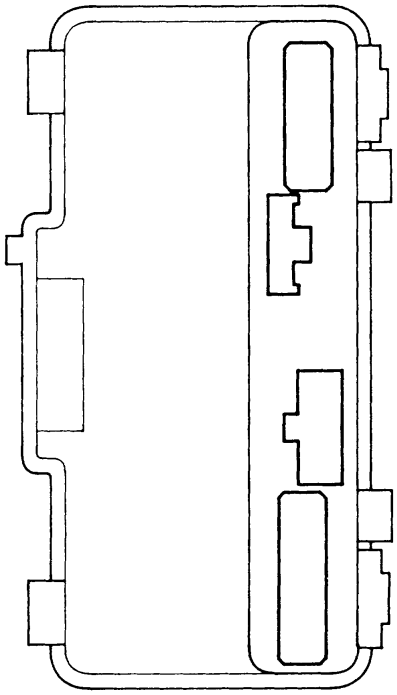

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
52	BSC F/S	(20)	10	TCS relay
53	RR DEFROSTER	40	10	Rear window defogger
54	BACK UP, ACC	40	10-1	Fuses 9, 10, 11, 12, and 13 (in passenger's under-dash fuse/relay box)
55	(POWER SEAT)	(40)	10-1	Fuses 2, 3, 4, 5, and 6 (in passenger's under-dash fuse/relay box)
56	HEATER MOTOR	40	10-1	Blower motor
57	COOLING FAN	20	10-1	Radiator fan motor
58	(CONDENSER FAN)	(20)	10	A/C compressor clutch, Condenser fan motor, Radiator fan control module (V6)
59	(HEATED SEAT)	(20)	10	Seat heaters (Canada EX)

©2002 American Honda Motor Co., Inc.